

## BT-203 (TIPS TO CLONE HARD DRIVE)



1: PRESS POWER BUTTON ON



2: RED LED LIGHT WILL COME ON




3: PRESS DUPLICATE BUTTON



3: RED LED LIGHT WILL FLASH FOR 5 SECOND AND THEN STOP FLASHING



4: PRESS DUPLICATE BUTTON AGAIN  
RIGHT AFTER THE RED LED LIGHT  
STOP FLASHING

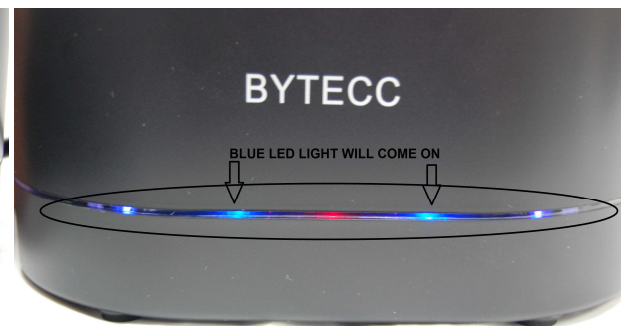

5: BLUE LED WILL COME ON

6: ONCE DUPLICATE PROCESS FINISHED, ALL LED LIGHT WILL BE OFF